


## MOUNTING PLATE INSTALLATION INSTRUCTIONS

### This Mounting Plate Kit includes:

- 1 Windwalker mounting plate
- 2 rubber-coated u-bolts
- 2 black rubber gaskets (to protect powder coat finish)
- 2 metal plates
- 4 nylon-insert locking nuts
- 2 clear vinyl tubular bushings for leveling (*not shown*)
- 1 rubber O-ring that will fit around the bottom of the mast to seal out water from the threads. (*not shown*)

**Tools required:** 7/16" wrench

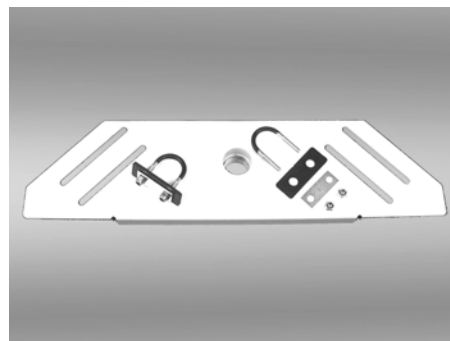

The mounting plate can be installed on either side of the rail on the back of your rig.

This mounting plate is specially designed to fit on a 1" O.D. rail and to take a threaded mast.

The **Mast** is a standard Schedule 40 1" inside-diameter galvanized steel threaded pipe that can be purchased at any hardware or home improvement store for less than \$20. Suggested length is 30".  
(For aesthetics, you may want to spray paint the pipe first.)

### STEP 1 – POSITION THE PLATE


Place the mounting plate **with the receiver collar upright** on either corner of your camper's top rail.

Insert the rubber-coated u-bolt under the rail and through the mounting plate slots.

Fit the rubber gasket over the exposed bolt ends then fit the metal plate over the rubber gasket.

Thread the nylon locking nuts onto the u-bolt ends. **DO NOT TIGHTEN, YET.**

Repeat with the other slot and u-bolt.

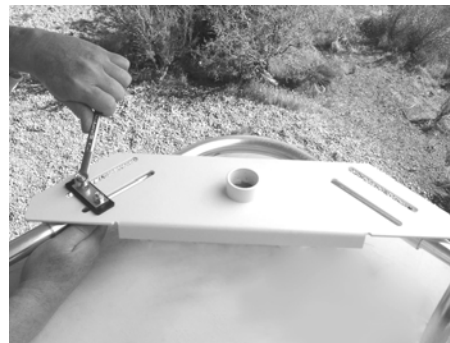

### STEP 2 – LEVEL and TIGHTEN

After attaching both sides of the mounting plate to the rail, see how level it is.

If it needs to be adjusted use one or two of the clear tubular spacers that came with the kit.

Once you are satisfied the plate is level horizontally, tighten the nuts on the u-bolts.

### STEP 3 – INSTALL THE MAST

Position the rubber O-ring on the mast amid the lower threads.

Take the Windwalker wind generator you have assembled, feed the quick-disconnect wire through the mast, and drop the wind generator downtube into the top of the mast.

Guide the wire that is now extending from the bottom of the mast through the receiver of the mounting plate.

Place the mast into the mounting plate collar and thread into the receiver until snug. O-ring will seal itself.



**STEP 4 - Connect to the wires leading to your battery and enjoy the free energy!**

**CAUTION: DO NOT DRIVE YOUR VEHICLE WITH THE WIND GENERATOR UP**